

Hand Held Brake Pipe Flaring Tool



Information

- The fastest and most convenient way to create double or single flares on brake lines.
- Can be used on a variety of materials including copper, nickel, and stainless steel.
- The ability to work in situ with the vehicle saves huge amounts of time and effort.

Precautions

Always wear safety gear.


Working in a clean and safe environment.

This task should be carried out by trained personnel.

Make sure to consult manufacturers manual.


Do NOT use with air tools.

- Keep the pipe end flat against centre line.
- Tighten the locking screws fully to clamp the pipe.

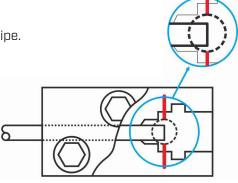


Step 1

- Insert the OP1.
- Punch (I.D. groove) and tighten fully up to hexagon.

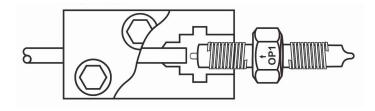

Step 2

- Remove the punch.
- Rotate and insert the OP2 end punch.
- Tighten fully up to a hexagon.

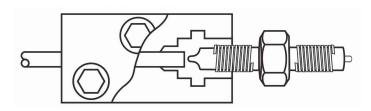









Warranty

If you are unsure on how to use the item please contact us. If it were to fail due to a manufacturing fault or poor workmanship we will repair or replace it. Please contact your local dealer in the event you need to send the item back. You can also make a repair/replacement request on our website and download & complete the form online. Normal wear and tear along with misuse will void any warranty. Consumables are not covered under warranty.

www.welzh.com



Welzh Werkzeug Ltd Loanwath Road Gretna, Scotland DG16 5HD +44 (0)1461 700120